

# LCS-404T


### **Fashion Speaker**









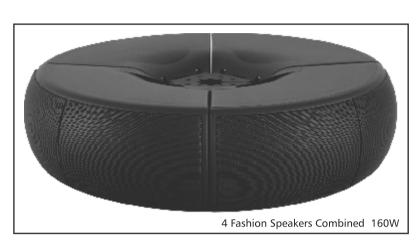

Attractive, fashionable speaker designed for locations where elegant aesthetics are as important as exquisite sound quality. Ideal for restaurants, bars, malls, reception lobbies, offices, retail stores etc.

A single speaker, rated at 40 watts, contains 2 nos 4" coated rubber surround woofers, 1 dome tweeter, and line matching transformer. Can be mounted horizontally in a corner, or vertically. 4 Speaker systems can be combined into a unique all-directional configuration with 160 watts rating.

### Specifications

INPUT POWER	40W RMS	SPL at 1kHz (1W/1m)	90dB
RATED VOLTAGE	100V	SPEAKER	Woofer 2 × 101.6mm (4") PP cone
POWER TAPS ON 100V	40/20/10/5W		Tweeter 1 $ imes$ 25.4mm (1") Dome Type
LOW IMPEDANCE	$4\Omega$	DIMENSIONS	W350 × H135 × D260 mm
FREQUENCY RESPONSE	90-20,000Hz	WEIGHT	3.3kg

Design and Specifications are subject to change without notice owing to continuous product up-gradation. Technical specifications are subject to production tolerances.

We cannot be held responsible for printing errors, should they occur. 

© Copyright Ahuja Radios, 2013. All rights reserved. Any unauthorized reproduction or use of logos, images or design elements is strictly prohibited by law.

No part of this compilation may be reproduced in any manner or translated without written permission.


AHUJA RADIOS

215, Okhla Industrial Estate, New Delhi-110020, INDIA C-45, Phase-II, Noida-201305 (UP) INDIA ● 3, Okhla Industrial Estate, New Delhi-110020 INDIA Tel.: +91-11-26831549, 41612474 Fax: +91-11-26847287 E-mail: ahuja@ahujaradios.com Website: www.ahujaradios.com F. & O. F.




#### MOUNTING ARRANGEMENT


**STEP-01** Remove mounting bracket from the fashion speaker by opening two screws as shown.

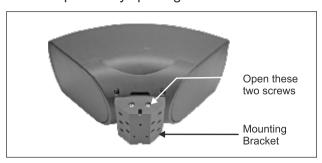

**STEP-02** The mounting bracket comprises of two parts - A & B as shown. Remove part A and then slide out part B from the fashion speaker.

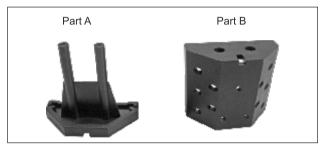

**STEP-03** For mounting the fashion speaker at the desired location and in required direction (ie., horizontal or vertical), suitably fix part B of the mounting bracket through its three holes, on the mounting surface, by using suitable hardware. Ensure that the bracket is securely fixed.

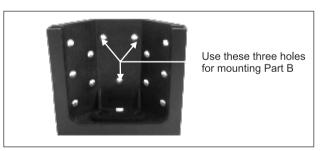

**STEP-04** Put back the fashion speaker by sliding it into part B which is already fixed on the wall.

**STEP-05** Screw back part A onto part B to provide secured locking of the mounting bracket.



## LCS-404T Fashion Speaker









For mounting 4 nos of LCS-404T Fashion Speaker, use mounting part "1.A1146 Bracket with metal bar B-22" which can be purchased separately.



#### **CAUTION:**

Check carefully that all screws, including those fixed to the wall or other mounting surface, are securely fixed.