

- Thank you for purchasing the AHUJA PA Amplifier.
- Please read this manual thoroughly before making connections and turning on the power.
 Following the instructions in this manual will enable you to obtain optimum performance from your new AHUJA PA Amplifier.
- Please retain this manual for future reference.

Safety Instructions

Read the Instructions: Please read all the instructions in this section carefully before installation or use of the product. All the safety instructions must be followed.

Retain the Instructions: Please retain this Instruction Manual for future reference.



This symbol, wherever it appears, alerts you to the presence of uninsulated hazardous voltage that may be sufficient to constitute a risk of electric shock. External wiring to any terminal marked with this symbol must be done by a trained and instructed person only.



This symbol, wherever it appears adjacent to a component, alerts you that the concerned component can only be replaced by another of the exact same specifications.

WARNING

- To reduce the risk of electric shock, do not remove the top cover. No user serviceable parts inside. Refer all servicing to qualified personnel only.
- Before replacing any fuse, make sure the set is switched off and disconnected from the AC mains or any other power source. Replace a fuse only with another of exactly same specification.

CAUTIONS

Water & Moisture: To reduce the risk of fire or electrical shock, do not expose this set to rain or moisture. Do not use this set near water or in a wet location. Do not keep any object filled with liquid, such as a vase, on top of this set. Do not insert or remove the AC mains plug with wet hands.

Power Source: The voltage & frequency of the AC mains supply, to which this set can be connected, is marked on the rear panel of the set. Do not connect this set to any power source other than those specified on the rear panel.

Power Cord Protection: Do not cut, kink, damage or modify the AC power cord supplied with this set. Keep the AC power cord away from heaters and harmful chemicals. Do not keep any heavy object on the power cord.

Operation on Generator: When operating this set on a generator, make sure the set is switched off till the generator voltage has stabilized.

Ventilation: This set should be situated so that its location or position does not interfere with its proper ventilation. Do not cover the ventilation holes / slots. Do not insert or drop anything into the ventilation holes / slots.

Stability: This set must be kept in a stable and flat horizontal position, and never in a tilted position. Do not place this set on an unstable stand, tripod, bracket or mount. Do not use attachments which are not supplied or explicitly recommended by the manufacturer.

Cover Strip: The cover strip of the output terminal strip, must be replaced after making connections. Failure to do so may result in exposure to hazardous voltages.

Earthing: This set must be earthed properly before use. A wire from the Earth terminal on the rear panel must be connected to electrical earth.

Cleaning: Disconnect this equipment from the AC mains and external battery before cleaning. Clean with a damp cloth, but do not allow any liquid to enter the set. Do not clean with liquids or aerosols.

Exposure to Heat: Do not touch the heatsinks while the set is working.


• Table of Contents

	Contents	Page No	-
•	Features/General Description of Product		4
•	Front Panel Controls & Features		5
•	MP3 Playback Facility: Controls & Features		6
•	Rear Panel Controls & Features / Pairing of Bluetooth Device		7
•	Interconnections		8
•	Speaker Connection Guidelines		9
•	Typical Applications	1	0
•	Specifications	1	6

Features/General Description of Product

- Designed for use in a wide variety of PA applications and DJ performances.
- UBA-500DP is a 500 Watts amplifier which can be connected to various input sources like a Microphone, PA Mixer, CD player, DJ Mixer, Cassette player, Keyboard etc.
- The amplifier has a built-in MP3 digital player with remote control and can play USB drive, as well as SD/MMC card.
- MP3 Player has Vol up/down, Pause, Prev., Next features.
- Amplifier has Cut-Boost type Bass/Treble controls.
- Line Input and Line Output have been provided to enable interconnections with other power amplifiers.
- Circuit Protector Device and externally accessible fuses have been provided, which safeguards the amplifier against overload and short circuit.
- The amplifier is fully protected for variations in AC supply due to Genset / Mains fluctuation upto 300V.
- Indicator LEDs for Power, Signal, Temp, Overload and Fault conditions have been provided.
- Ease of operation, combined with service accessibility has been optimized in the design.

Front Panel Controls & Features

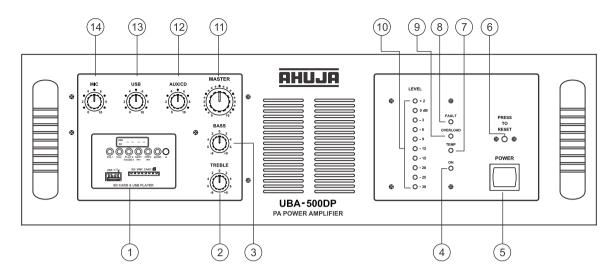

1. MP3 Playback Facility

(Details on Page 7)

2. TREBLE Control

For attenuating or boosting the high frequency signal level with a centre frequency of 10kHz.

3. BASS Control

For attenuating or boosting the low frequency signal level with a centre frequency of 100Hz.

4. POWER LED

The glowing of this red LED indicates that the amplifier is switched ON.

5. POWER Switch

Push the top part of the knob to switch the amplifier ON. Push the bottom part of the knob to switch the amplifier OFF.

6. RESET Button

This button pops out when the circuit protector trips. Rectify the cause and press the RESET button for resetting to normal operation of the amplifier.

7. TEMPERATURE LED

The glowing of this yellow LED indicates excessive temperature of the output devices. The inbuilt automatic protection circuit then mutes the input signals. The amplifier will remain at mute status, till the amplifier cools down to normal temperature.

8. FAULT LED

The glowing of this red LED indicates that some fault has occurred in the amplifier. The inbuilt automatic protection circuit then mutes the input signals. The amplifier will remain at mute status till the fault is rectified.

9. OVERLOAD LED

The glowing of this red LED indicates that the circuit protector has tripped. The AC mains supply to the amplifier is cut-off till the fault is rectified and the reset button (6) is pressed.

10. LED Array


This indicates the output level of the amplifier. Acceptable output levels are indicated by occasional flickering of the 0dB LED. If this red LED glows continuously then it is advisable to reduce the input signal level either from the signal source or the amplifier volume controls.


11. MASTER Volume Control

For adjustment of the overall volume level of the amplifier.


- 12. AUX / CD Volume Control
- 13. USB and SD Card Volume Control
- 14. MIC Volume Control

MP3 Playback Facility: Controls & Features

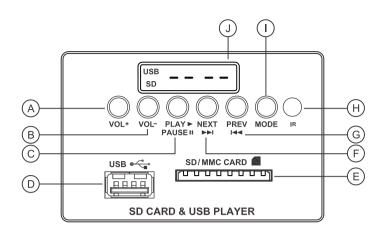

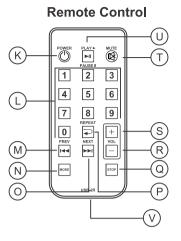


- A. VOL+: To increase volume level of MP3 player.
- B. VOL-: To decrease volume level of MP3 player.
- C. ►II PLAY/PAUSE: Press PLAY/PAUSE once to Pause if music is already playing. Press PLAY/PAUSE again to resume playing.

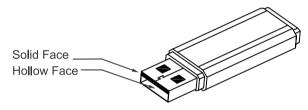

Any forceful insertion in wrong direction will damage the connector.

E. SD/MMC Card Connector: Insert the SD/MMC Card into the slot to play. When taking out the card, push the card to take out.

While inserting SD/MMC card into the slot, ensure that the card is inserted in such a way that all pins are facing upward and cut is towards left as shown in figure.

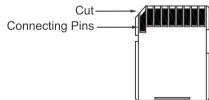


- F. ►►I Next: Press NEXT to select next forward music track. Pressing NEXT repeatedly will move the system to successively next forward tracks. Then press PLAY/PAUSE for playing the track so selected.
- G. I◄◄ Prev: Press PREV to Select the previous track. Pressing PREV repeatedly will move the system to successively previous tracks.
- H. IR Sensor: Picks up signal from the Remote control.

Point the Remote control toward this sensor for best results.


- I. Mode: To select USB or SD when both are inserted.
- J. LED Display: Instantly displays 3 digits of the track selected play to i.e 001 to 999. During play, display the time duration of the track played.

Remote Control

- **K. Power:** Press once to switch off MP3 player, press again to switch ON.
- L. Number key 0 to 9. To choose the track number to be played.
- M. ► To select the previous track.
- N. MODE: To select SD or USB if both are inserted.
- O. ▶►I: Press to select the next track.
- P. → Press once to repeat the song being played. Press twice to repeat all the songs.
- Q. STOP: Press to stop the track being played.
- R. Vol: Press to decrease the volume of MP3 Player.
- S. Vol: Press to increase the volume of MP3 Player.
- T. MUTE: Press once to mute the sound, press again the resume the sound.
- U. ►II PLAY/PAUSE: Press Play/Pause once to Pause when music is already playing. Press Play/Pause again to resume playing.
- V. Battery Replacement: Pull out the battery tray and replace the battery with positive electrode facing upwards as shown in fig. below. Push the battery compartment back to the close position. Use CR2025 or equivalent lithium coin cell.

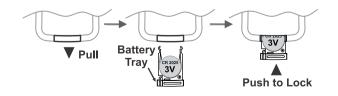

Rear Panel Controls & Features

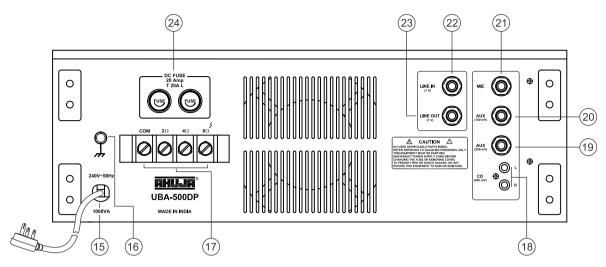

- 15. 3 Core AC Mains Cable with Plug
- 16. Earth Terminal
- 17. SPEAKER Terminal Block (2Ω , 4Ω & 8Ω) For connecting low impedance speakers.
- 18. CD Input RCA Sockets

For connecting stereo inputs such as a CD player, DJ Mixer etc. CD Input should be used only when the Aux Input is not connected.

19. AUX. INPUT SOCKET (250mV)

For connecting an unbalanced signal from an Auxiliary source of higher output like Mixer, CD Player etc.

20. AUX Input Jack Socket (100mV)

For accepting an unbalanced signal from an auxiliary source like Tuner, Cassette Player, Echo Mixer etc.

Aux Input should be used only when the CD Input is not connected.

21. MIC Input Jack Socket

For accepting unbalanced signal from a low impedance microphone.

22. LINE Input Jack Socket

For connecting an external Mixer to enhance the number of inputs.

23. LINE Output Jack Socket

For connecting to a booster amplifier to obtain combined higher power output.

24. DC Fuses (Rating 20 Amp 250V)

These protect the amplifier from any excessive current flow.

Caution

• The equipment must be earthed properly before operating it to avoid electric shock. A wire from the Earth Terminal must be connected to either water pipe or to electrical earth for safe operation.

Pairing of Bluetooth Device

SWITCH ON the amplifier in use. The Default condition of the MP3 digital Player is BLUETOOTH mode. The display shows "bLUE.

To play the MP3 programme from mobile phone or laptop, the PAIRING of the Bluetooth devices of mobile phone & Amplifier is necessary.

Pairing is done as follow:-

SELECT the Bluetooth option in Mobile Phone or laptop & follow the instruction as appear on mobile/laptop.

Normally following general instructions are followed:

Press ACTIVATE /ON/DISCOVERABLE/SEARCH, etc, as applicable in the mobile phone or laptop used.

Pairing of Bluetooth Device

SWITCH ON the amplifier in use. The Default condition of the MP3 digital Player is BLUETOOTH mode. The display shows "bLUE.

To play the MP3 programme from mobile phone or laptop, the PAIRING of the Bluetooth devices of mobile phone & Amplifier is necessary.

Pairing is done as follow:-

SELECT the Bluetooth option in Mobile Phone or laptop & follow the instruction as appear on mobile/laptop.

Normally following general instructions are followed:

Press ACTIVATE /ON/DISCOVERABLE/SEARCH, etc, as applicable in the mobile phone or laptop used.

The mobile phone or laptop starts searching for the new Bluetooth device. The moment either TDMO11 or BTSPEAKER appears on the mobile phone or laptop, select the new device i.e. TDM011 or BTSPEAKER and press OK or allow it to appear on mobile. System is ready to use.

Interconnections


In some mobiles, it asks for a code to allow access. The press 0000 and follow the steps, like pressing "OK", "Allow once", "Allow always" etc. and

make the device ready for use.

The amplifier can be placed as a tabletop unit. The amplifier uses an Selefficient work of the second as a tabletop unit. The amplifier uses an Selefficient work of the second as t


Note: It is not necessary that all functions of remote control will be activated through Bluetooth and compatibility varies from mobile to mobile.

 To avoid loud switching noise, always switch ON the power amplifier after all other units of the audio system have been switched ON. After operation, switch it OFF first and then the other units.

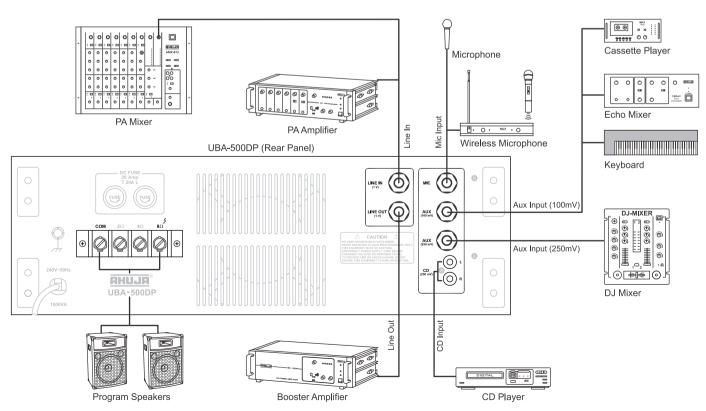


Speaker Connection Guidelines

UBA-500DP is a high-powered amplifier. Therefore it is very important that correct loudspeaker connections are made to avoid damage to the amplifier or speakers.

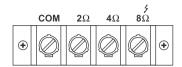

Low Impedance Speaker Connections


• Box type Speakers can be directly connected to Com-2 Ω /4 Ω /8 Ω Terminal Strip.

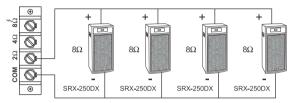

Resultant Impedance = $(8\Omega / 4) = 2\Omega$

Connecting Four SRX-250DX Speakers

The four SRX-250DX Speakers (each speaker has 8Ω impedance) should be wired in parallel as shown in figure. The resulting impedance of the speaker system will be $2\Omega.$ The speaker system should be connected to the 2Ω tap of the amplifier.

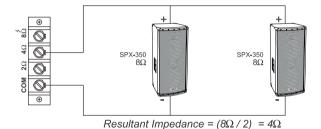

Connecting Two SPX-350DX Speakers

The two SPX-350 speakers (each speaker has 8Ω impedance) should be wired in parallel as shown in figure. The resulting impedance of the speaker system is $4\Omega.$ Thus they should be connected to the 4Ω tap of the amplifier.



Connecting One SPX-800 Speaker

The one SPX-800 speaker has an impedance $4\Omega.$ Thus it should be connected to the 4Ω tap of the amplifier as shown in the figure.



Connecting One SWX-650 Subwoofer

One SWX-650 subwoofer system has an impedance of 8Ω . Thus it should be connected to the 8Ω tap of the amplifier as shown in the figure.


IMPORTANT

• Speakers should be connected only to either COM- 2Ω or COM- 4Ω or COM- 8Ω terminals as illustrated above but never to more than one set of terminals.

Typical Applications

Connecting Two UBA-500DP To Make A 1000W Mono System

- 1. Insert USB drive or SD/MMC card to the first UBA-500DP or connect the output of the CD Player to the CD Input of the first UBA-500DP using a patch cord with RCA plugs at both ends.
- 2. Connect the Line Out of the first UBA-500DP to the Line In of the second UBA-500DP using a patch cord with 1/4" phone plugs at both ends.
- 3. Loudspeaker connections to both the amplifiers should be done independently. Each amplifier is connected to a speaker stack which comprises of four SRX-250.
- 4. The four speakers in each stack will be wired together in parallel (resulting impedance is 2Ω) and connected to the COM and 2Ω tap of their respective UBA-500DPs.
- 5. Finally, when operating the system, any adjustment in the overall tonal quality of the sound can be made through the 2 band equalizer of the first UBA-500DP only.
- 6. This MONO system is capable of delivering output power of 1000W which is suitable for various indoor as well as outdoor applications.

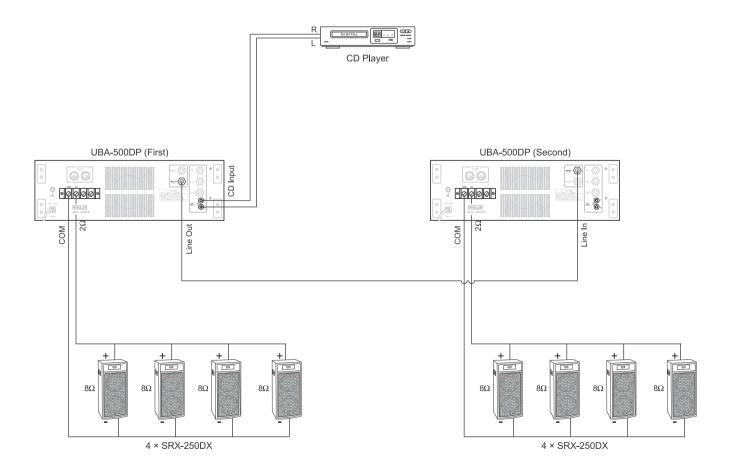


10

• Typical Applications....

Connecting Two UBA-500DP For Making A 1000W Stereo System For DJ Applications

- Connect the Left output of a CD Player to either Aux Input or Left CD Input of the UBA-500DP (Left) and Right output of the CD Player to the Aux Input or Right CD Input of the UBA-500DP (Right), using a suitable patch cord.
- 2. The left and right speaker stacks comprise of two SPX-350 on each side. The two speakers in each stack will be wired together in parallel (resulting impedance is 4Ω). Each stack would be independently connected to the COM and 4Ω tap of their respective UBA-500DPs.
- 3. Finally, when operating the system, any adjustment in the tonal quality of the sound can be made separately through the 2 band equalizer of each UBA-500DP.
- 4. This STEREO system is capable of delivering output power of 500W per channel which is ideal for medium size gatherings.

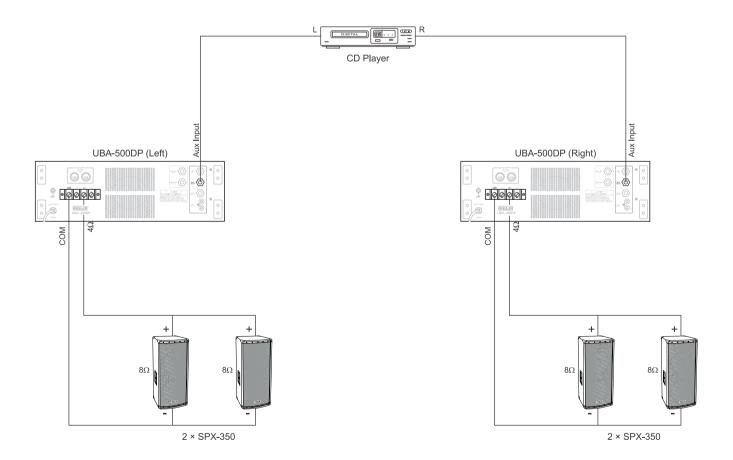


Typical Applications....

Connecting Five UBA-500DP To Make A 2500W Mono System For Large Outdoor Programme

- Connect a Microphone and other Program Sources like USB drive, SD/MMC card, Cassette Player or a CD Player to the first UBA-500DP (Master).
- Connect the Line Out of the first UBA-500DP (Master) to the Line In of the second UBA-500DP (Booster A) using a patch cord with ¼" phone plugs at both ends.
- 3. The Line Out of the second UBA-500DP (Booster A) should be connected to the Line In of the third UBA-500DP (Booster B) using a patch cord with ¼" phone plugs at both ends.
- 4. The fourth and fifth UBA-500DP (Booster C and Booster D) should be connected in the same way.
- 5. Speaker connections to each of the five amplifiers should be done independently. Each of the amplifier can be connected to a speaker stack that consists of two SPX-350 wired in parallel (resulting impedance is 4Ω).
- 6. The impedance of each speaker stack should be matched to the output impedance of their respective amplifiers and thus should be connected to the corresponding tap of the amplifier.
- 7. Finally, when operating the system, any adjustment in the overall tonal quality of the sound can be made through the 2 band equalizer of the first UBA-500DP (Master) only.
- 8. This MONO system is capable of delivering output power of 2500W which is ideal for large outdoor programmes.

(Refer to page 13 for illustration)

• Typical Applications....

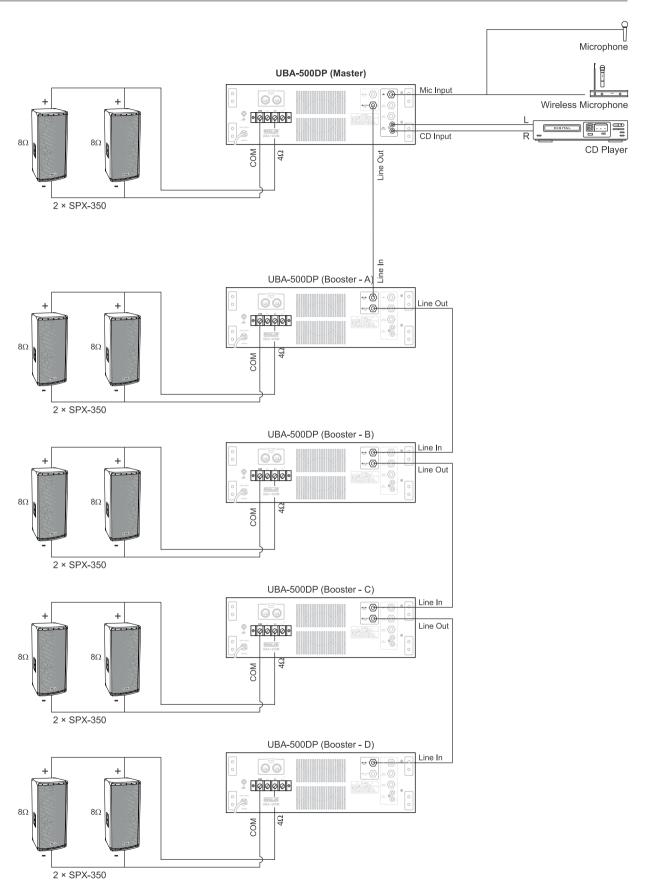

13


• Typical Applications....

Connecting Eight UBA-500DP For A Live 2000W + 2000W Stereo DJ Programme

- Connect the output of the Twin CD Player to the Stereo Line Input of a DJ Mixer.
- 2. Connect the Left and Right Outputs of the DJ Mixer to the respective inputs of an Active Crossover using a suitable patch cord.
- 3. Connect the Left Low frequency output of the active crossover to the Line In jack of first left channel UBA-500DP (Booster AL) using a patch cord with ½" phone plugs at both ends.
- 4. The Line Out of Booster AL should be connected to the Line In jack of the second UBA-500DP (Booster BL).
- 5. Similarly, the Right Low frequency output of the active crossover should be connected to the two right channel UBA-500DPs (Booster AR, BR) as shown in the diagram.
- 6. The Left and Right Low frequency speaker stacks comprise of two SWX-650s on each side. Each stack will have two columns of one SWX-650. Each column would be independently connected to the COM and 8Ω tap of a UBA-500DP.
- 7. Now connect the Left High frequency output of the active crossover to the Line In jack of third left channel UBA-500DP (Booster CL) using a patch cord with ½" phone plugs at both ends.
- 8. The Line Out of Booster CL should be connected to the Line In jack of the fourth UBA-500DP (Booster DL).
- 9. Similarly, the Right Low frequency output of the active crossover should be connected to the two right channel UBA-500DPs (Booster CR, DR) as shown in the diagram.
- 10.The Left and Right High frequency speaker stacks comprise of four VS-300s on each side. Each stack will have two columns of two VS-300s. Each column would be independently connected to the COM and 4Ω tap of a UBA-500DP.
- 11. Finally, when operating the system, any adjustment in the overall tonal quality of the sound can be made from the DJ Mixer.
- 12. This STEREO system is capable of delivering output power of 2000W per channel and will render high quality rich powerful sound both in large indoors as well as outdoor applications.

(Refer to page 15 for illustration)

• Typical Applications...

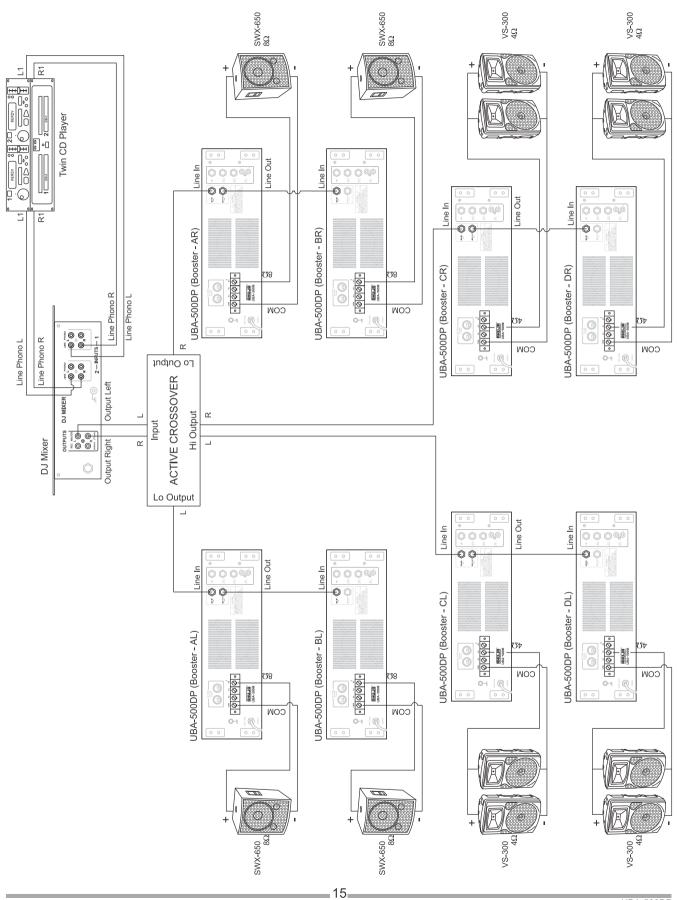

Specifications

MODEL	UBA-500DP	
Power Output	650W RMS Max.	
	500W RMS at 10%THD	
	475W RMS at 5% THD	
	450W RMS at 2% THD	
Output Regulation	≤ 2dB no load to full load at 1kHz	
Input Channels	1 × Mic 1mV / 4.7kΩ	
	(Mic source impedance 50Ω to $1k\Omega$)	
	1 × Aux 100mV / 470k Ω	
	1 × Aux 250mV / 20k Ω	
	1 × CD 250mV / 20kΩ	
	Line Input 1V / $10k\Omega$	
Digital Player	Mp3 Player with Remote Control	
	(USB, SD and MMC card reader)	
Frequency Response	50Hz-18,000Hz ±3dB	
Signal to Noise Ratio	60dB	
Tone Controls	Bass (100Hz) : ± 8dB	
	Treble (10kHz): ±8dB	
Line Output	1V/1kΩ	
Output Taps for Speaker Matching	2Ω , 4Ω & 8Ω	
Power Supply	AC: 220-240V 50/60Hz	
Protections	AC: 5 Amp Circuit Breaker; DC: Fuse 2 × 20Amp. (T 20A L)	
	Protected against high AC mains voltage, overload and temperature	
AC Power Consumption	1000 VA	
Dimensions	W482 × H166 × D435 mm	
Weight	23.5kg approx.	

Design and Specifications are subject to change without notice owing to continuous product up-gradation. Technical specifications are subject to production tolerances.

We cannot be held responsible for printing errors, should they occur.

© Copyright Ahuja Radios, 2013. All rights reserved. Any unauthorized reproduction or use of logos, images or design elements is strictly prohibited by law.

No part of this compilation may be reproduced in any manner or translated without written permission.

E. & O. E. 0K/12/13

E-mail: trusoundsupport@airtelmail.in